

车型	总成名称	型号	类别	油料规格\代码	用量	保养类型	保养间隔(先到为准)	备注
KMC1060D3	发动机	4100QBZL	油液	CF级及以上15W-40	9.5L	首次	5000Km/3个月	
						定保	5000Km/6个月	
	机油滤清器	JX0801	滤芯		1	首次	5000Km/3个月	
						定保	5000Km/6个月	
	燃油粗滤器	11051001040D481A			1	定保	5000Km/6个月	
	燃油精滤器	CX0708			1	定保	10000Km/12个月	
	空气滤清器	11091001086D310A			1	首次	5000Km/3个月	
						定保	5000Km/6个月	
	变速箱	6TS40-265A-51	油液	GL-5 80W/90	4.2L	定保	20000Km/12个月	
	后桥	24000101063DQS1A		GL-5 85W/90	4L	首次	5000Km/3个月	
						定保	10000Km/12个月	
	转向	动力转向器		动力转向油ATF-III		首次	5000Km	油液液面应位于油壶最大值、最小值中间偏上位置，不能高于最大值
					定保	40000Km		
制动液		V-3、DOT4或HZY3制动液			定保	40000Km		
冷却液		防冻液(乙二醇基)		8.5L		20000Km/24个月		

定期保养周期表

序号	系统	定保项目	首保后每行驶里程(万公里)							期限
			1	2	3	4	5	6	10	
1	动力	发动机机油液面	每行驶 1000 公里检查机油液面							
2	动力	发动机冷却液高度	每行驶 1000 公里检查并适当补充同类型冷却液， 2 年更换一次							
3	动力	正时齿形皮带/链条	10万公里内免检查。大于 10万公里，每增加 1 万公里进行检查。							
4	动力	风扇皮带及压缩机皮带的损伤情况	J							每 1 个月
5	动力	气门间隙				J				每 12 个月
6	动力	输油泵滤网		Q						每 6 个月
7	底盘	转向器齿轮油	每行驶 2 万公里添加，每行驶 4 万公里更换							
8	底盘	前轮定位				J				每 12 个月
9	底盘	转向自由行程				J				每 12 个月
10	底盘	前后轮毂轴承润滑脂	每行驶1万公里更换；							
11	底盘	传动轴万向节、滑动套、中间轴承、钢板弹簧销、桥转向主销及拉杆球头润滑脂(共32处)	每行驶1万公里更换；							
12	底盘	车轮紧固螺母扭矩	J							每 1 个月
13	底盘	轮胎气压及磨损	每行驶 1 万公里检查							
14	底盘	制动摩擦衬片的磨损	J							每 1 个月
15	底盘	制动鼓的磨损和损伤		J						每 6 个月
16	底盘	钢板弹簧的骑马螺栓扭矩		J						每 12 个月
17	底盘	减振器的漏油和损伤		J						每 6 个月
18	底盘	离合踏板，油门踏板和制动踏板行程	J							每 3 个月
19	底盘	制动液	每行驶 2 万公里添加，每行驶 4 万公里更换							
20	底盘	制动管路泄露	J							每 1 个月
21	底盘	制动软管	J							每 3 个月
22	底盘	空气滤芯	每行驶 5 千公里更换							
23	底盘	空气干燥器	推荐每月检查一次，当储气罐内有积水，则说明干燥筒已经失效，应更新新的干燥器							
24	底盘	蓄电池极桩烧蚀	J							每 1 个月
25	每行驶2万公里应及时清洗油箱。制动液，转向器齿轮油更换或添加时型号必须相同。首保后发现发动机，变速箱，后桥有渗油的部件应及时维修。									

备注：检查：J；更换：G；清洗：Q；添加：T。

车型	Assembly name	Model	category	Oil specification \ code	dosage	Maintenance type	Maintenance interval (whichever comes first)	Note
KMC1060D3	engine	4100QBZL	oil	CF class and above 15W-40	9.5L	For the first time	5000Km/3months	
	warranty					5000Km/6months		
	Oil filter	JX0801	filter		1	For the first time	5000Km/3months	
				warranty		5000Km/6months		
	Crude fuel filter	11051001040D481A			1	warranty	5000Km/6months	
	Fuel fine filter	CX0708				warranty	10000Km/12months	
	The air filter	11091001086D310A			1	For the first time	5000Km/3months	
						warranty	5000Km/6months	
	gearbox	6TS40-265A-51	oil	GL-5 80W/90	4.2L		20000Km/12months	
	Rear axle	24000101063DQS1A		GL-5 85W/90	4L	For the first time	5000Km/3months	
						warranty	10000Km/12months	
	swerve	power steering		Power steering oil ATF-III		For the first time	5000Km	The oil level should be located in the upper middle of the maximum and minimum value of the oil
						warranty	40000Km	
	Brake fluid			V-3, DOT4 or HZY3 brake fluid			warranty	40000Km
coolant		Antifreeze (glycol base)		8.5L		20000Km/24months		

Maintain the periodic table regularly

序号	system	Maintenance item	Mileage per first warranty (10,000 km)							Time limit
			1	2	3	4	5	6	10	
1	power	Engine oil level	Check the oil level every 1000 km							
2	power	Engine coolant height	Check and appropriately supplement the same type of coolant every 1000 kilometers, and replace it once every 2 years							
3	power	Timing toothed belt/chain	No inspection within 100,000 kilometers. More than 100,000 kilometers, every additional 10,000 kilometers to check.							
4	power	Damage of fan belt and compressor belt	J							per 1 months
5	power	Valve clearance				J				per 12 months
6	power	Oil pump strainer		Q						per 6 months
7	chassis	Steering gear oil	Add every 20,000 kilometers and replace every 40,000 kilometers.							
8	chassis	Front wheel alignment				J				per 12 months
9	chassis	Steering free travel				J				per 12 months
10	chassis	Front and rear hub bearing grease	Change every 10,000 kilometers traveled;							
11	chassis	Drive shaft universal joint, sliding sleeve, intermediate bearing, leaf spring pin, bridge steering kingpin and tie rod ball head grease (32 places in total)	Change every 10,000 kilometers traveled;							
12	chassis	Wheel fastening nut torque	J							per 1 months
13	chassis	Tire pressure and wear	check every 10,000 kilometers traveled;							
14	chassis	Wear of brake friction lining	J							per 1 months
15	chassis	Brake drum wear and damage		J						per 6 months
16	chassis	Saddle bolt torque of leaf spring		J						per 12 months
17	chassis	Oil leakage and damage to the shock absorber		J						per 6 months
18	chassis	Clutch pedal, accelerator pedal and brake pedal travel	J							per 3 months
19	chassis	Brake fluid	Add every 20,000 kilometers and replace every 40,000 kilometers.							
20	chassis	Brake line leakage	J							per 1 months
21	chassis	Brake hose	J							per 3 months
22	chassis	Air filter element	Change every 5,000 kilometers							
23	chassis	Air dryer	It is recommended to check once a month, when there is water in the gas storage tank, it means that the drying cylinder has failed, and a new dryer should be updated							
24	chassis	Battery pole pile ablation	J							per 1 months
25	per 20,000 kilometers, the fuel tank should be cleaned in time. Brake fluid, steering gear oil replacement or addition must be the same type. After the first protection, it is found that the engine, gearbox, and rear axle parts with oil seepage should be repaired in time									

Note: Check: J;
Replacement: G;
Cleaning: Q;
Add: T.